Ethnicraft

SOLID SURFACE LAYERS BATHROOM SINK
ASSEMBLY INSTRUCTION FOR SINK INSTALLATION

TOOL

TRANSPARENT
SILICONE GLUE
(not included in package)

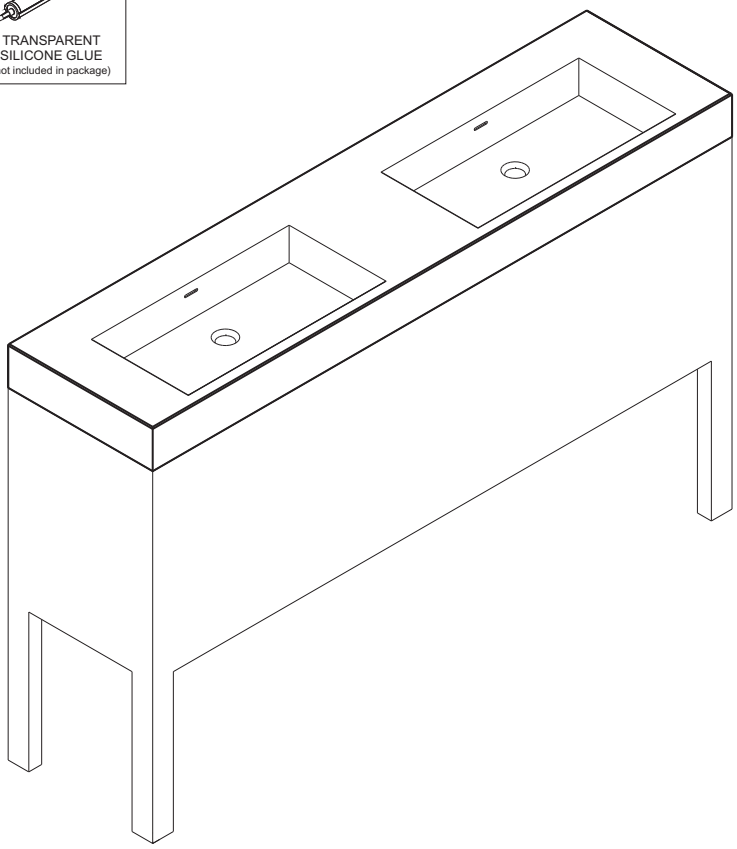

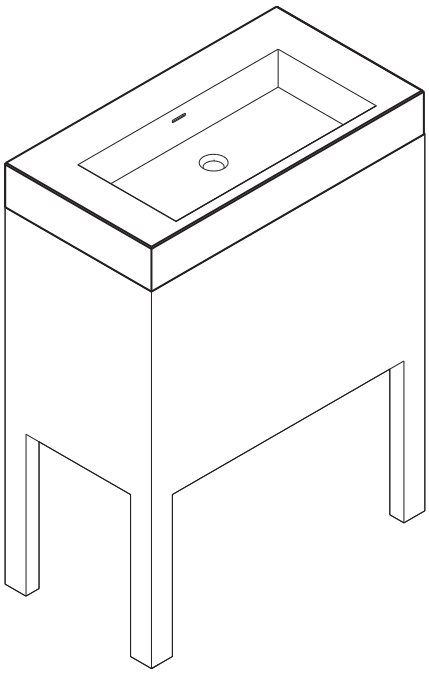

NOTICE

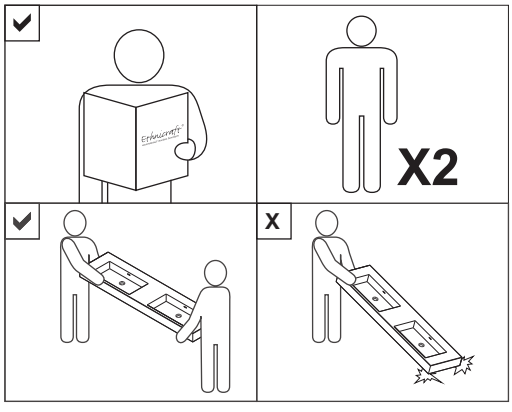

READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION. SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THESE INSTALLATION

SYMBOLS

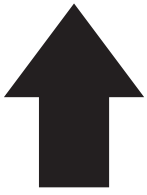

DIRECTION



NUMBER OF
PERSON NEEDED

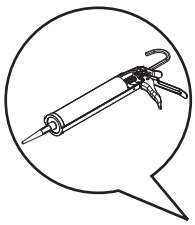

USE SILICONE GLUE

Ethnicraft

SOLID SURFACE LAYERS BATHROOM SINK
ASSEMBLY INSTRUCTION FOR SINK INSTALLATION

A. GLUING THE CABINET

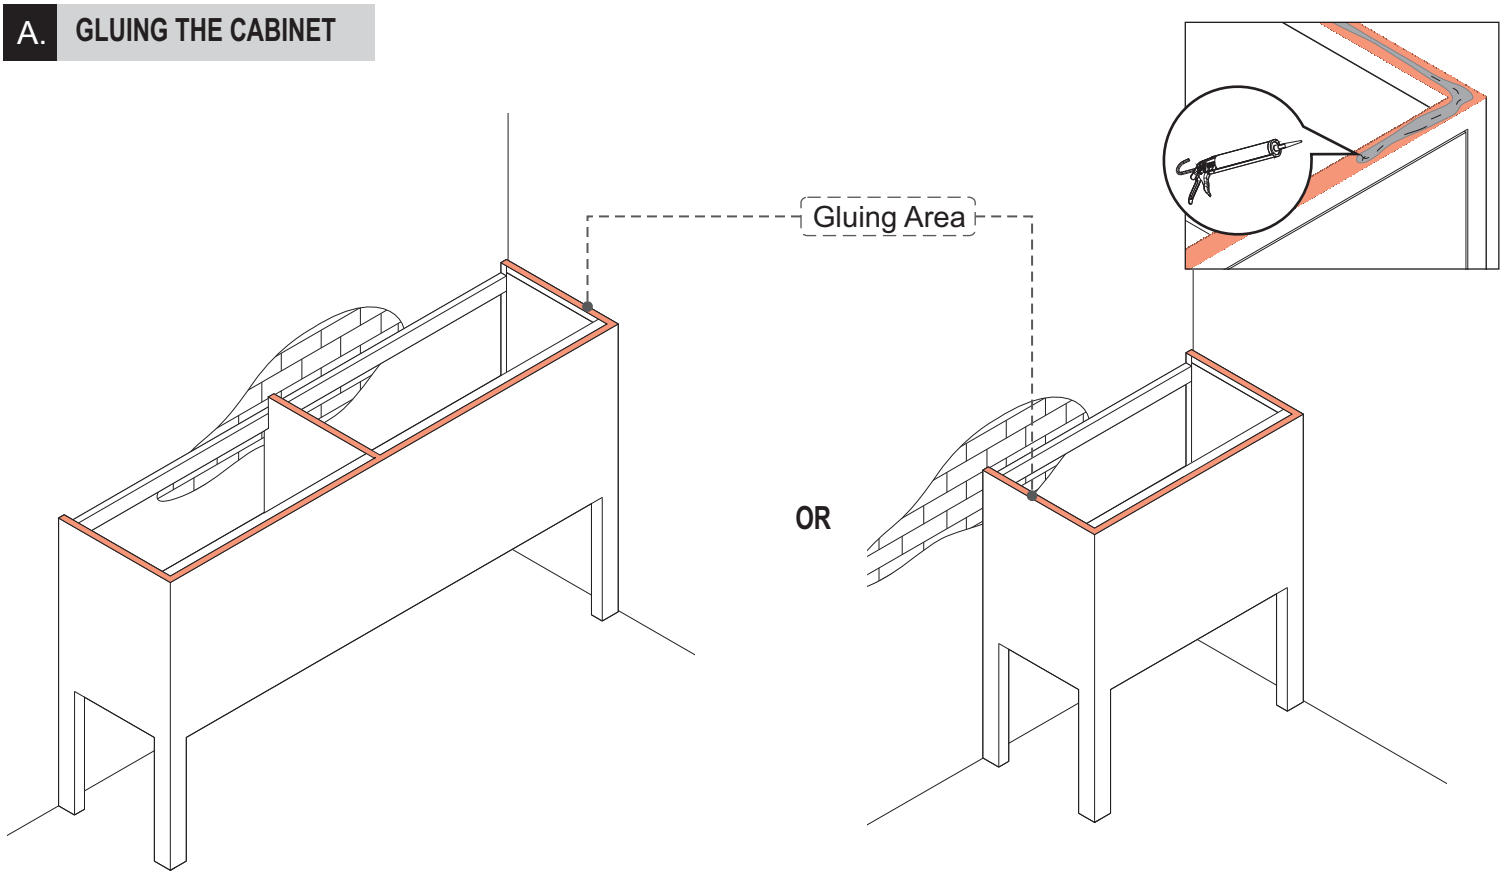

CABINET MIGHT BE SLIGHTLY DIFFERENT FROM ILLUSTRATION

B. INSTALLING SINK

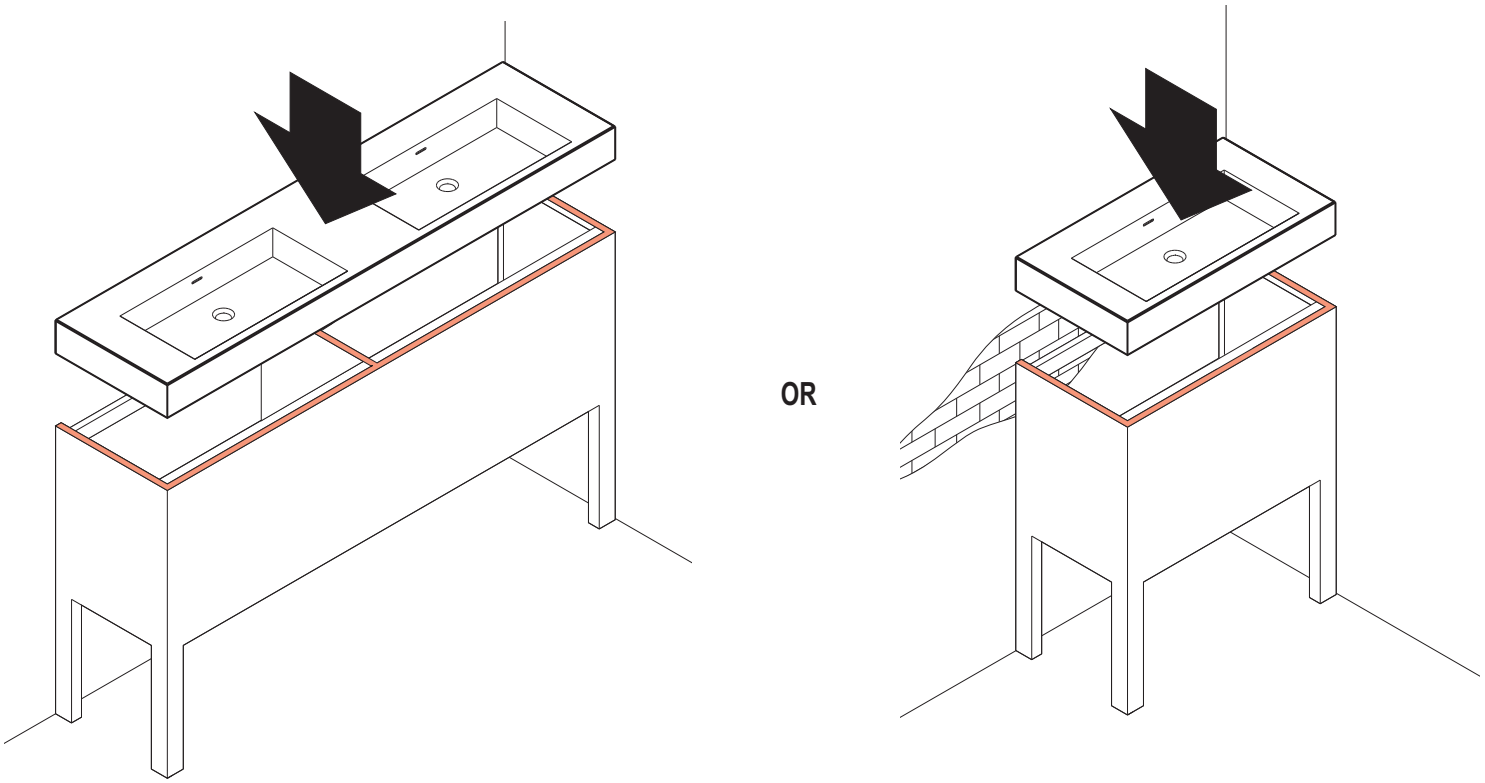

WAIT 24 HOURS TO LET IT DRY NATURALLY